



APD.PB.BF/FR60/120 CEILING/WALL ACCESS PANEL 1 or 2 HOUR FIRE RATED - PLASTERBOARD FACED WITH BEADED FRAME

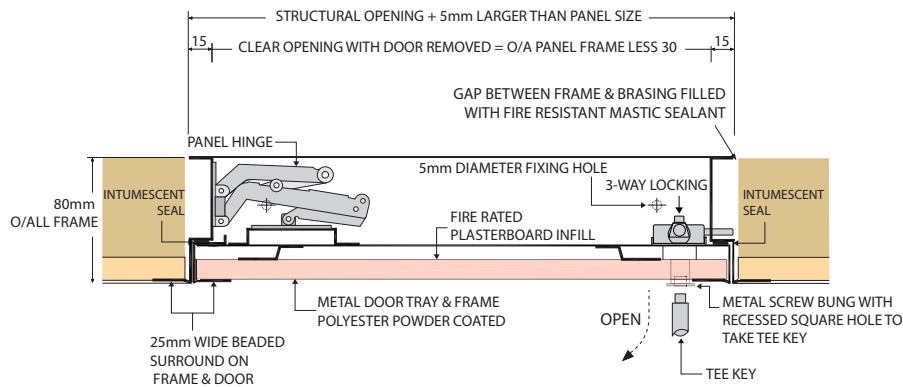

## SPECIFICATION

DESCRIPTION	Plasterboard Faced - Concealed Beaded Frame.
FIRE RATING	1 or 2 hour fire resistance for integrity to BSEN 1634-1:2008 and BSEN 1363-1:1988
HINGE TYPE	Panel Hinge.
COMPOSITION	Flush Plasterboard infill Faced Door. 1.2mm Thick Zintec Steel Perforated Frame. 1.2mm Thick Zintec Steel Door Tray with Plasterboard Infill. Polyester Powder Coated in matt white RAL 9010 20% gloss.
LOCKING	3-Way Locking System.
FITTING	Screw fix through the frame into a suitable trimming.
FRAME TYPE	Perforated Frame for taping and skimming on site.

## LOCKING OPTIONS

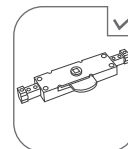

THREE-WAY LOCKING

## DIMENSIONS

Please ensure that on installation of the access panel, the actual size of structural opening in the wall/ceiling needs to be 5mm larger than the overall panel size e.g. structural opening for 600 x 600 will be 605 x 605 (See sizes below).

Sizes		Structural Opening		Clear Opening with Door Removed		
(x)	(y)	(x)	(y)	(x)	(y)	
300	300	305	305	270	270	
450	450	455	455	420	420	
550	550	555	555	520	520	
600	600	605	605	570	570	
600	900	605	905	570	870	(Hinged long side)
600	1200	605	1205	570	1170	(Hinged long side)

Bespoke sizes are also available

## FITTING INSTRUCTIONS

Note: the access panel may require extra support and bracing to allow safe operation.

- Insert frame into structural opening which needs to be 5mm larger than panel size, ensuring frame is flush with surface. Then screw fix through fixing points with 5 x 16mm fixing screws. Additional packers may be needed to prevent distortion of the frame. DO NOT fix through the face of frame. Any gaps between the frame and bracing to be filled with fire resistant material/sealant.

- Simple to operate: remove the plug, insert the Key into the lock and rotate 90 degrees. Ensure there is sufficient clearance for the lock to operate correctly.

- Access Panels with a Perforated frame are designed for a wet finish. Scrim tape must be applied to all beaded edges prior to plastering. IMPORTANT NOTE: If scrim tape is not used the plaster may not adhere to the access panel's frame.